# **D-Link**

**CCTV** Camera **2MP Full HD Fixed Dome** Day & Night AHD Color Camera **Quick Set up Guide D**-Link Notes: Before providing power for the camera, please read this User Guide in detail! Franchiser: Do not attempt to disassemble the camera. If the camera can not work, please contact local franchiser or our company.

For any technical assistance contact 1860 233 3999

#### BRIEF OF PRODUCT

## 

### 

# **D-Link**

#### \* Sensor (CMOS)

Adopt 1/2.9" CMOS Sensor.

- \* Auto Gain Control (AGC) Built-in auto gain control (AGC) circuit. The color camera can get high definition picture in low Lux condition.
- \* Scanning Mode NTSC or PAL mode.

## Notes:

- The power supply must through safe attestation. Its output voltage, current, voltage polarity and operating temperature must match the camera's requirement.
- When using the camera in the thunderbolt condition, please note to mount Anti-thunder device or put off the power supply plug and cable.
- ●In order to capture high quality pictures, the power supply's cable and video output cable should not be too long.

# Monitor Video KEY BOARD Video Link wire rule: DC12V

# TROUBLE AND SOLUTION

- 1. No Picture after providing power
- . May be the power supply voltage abnormity, please check the power supply voltage and pole whether exactitude.

Please check all the connecting cable and monitors whether be connected correctly or not.

- The picture level direction have flowing interference ripples
   May be caused by the power supply AC ripples, it need filter the wave of the power supply.
- Check the monitor and peripheral equipment used.

#### 3. The picture background color changes continuously

 
- . The fluorescent lamp's electromagnetic field cause color roll. This is proper phenomenon of the cameras.
- Reduce the fluorescent lamp numbers or increase the distance between the camera and the fluorescent lamps can improve it.
- . Use power supply external sync. camera can solve it.

#### 4. The picture smear too mass

- . The power supply's voltage unstable.
- . Connecting cables not connect correctly or have high impedance.



DC12V Power Supply



Congratulations on your purchase of this product. This User Guide suits DCS-F2612-L1C product. We

Please read this instruction manual carefully to en-

adopt the latest CMOS technical of sensor and driver.


good for you to apply to your CCTV system.

sure proper use of the product.

Fixing and using this model are convenient too. It is very



The symbol is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient Magnitude to constia risk of electric shock to persons.

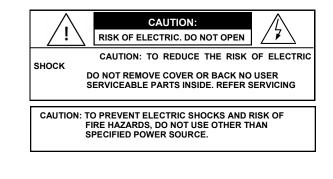



- Please note the camera's operating temperature and its using environment requirement. Avoid using the camera at too high or too low temperatures. The operating temperature is -30~+60... (Recommendatory operating temperature is -10~+50...)
- Never make the camera face the sun or bright object. Otherwise, it will damage the CMOS.
- Do not mount the camera near by the radiator or heater.